

This quick reference guide to dishwasher accessories will help to make sure you have what you need for a successful installation in just 3 easy steps:

**Step 1** Find your model number.

**Step 2** Read the information on accessories to determine your needs and prepare yourself by knowing the answers to the following questions:

- Do you have the required water supply?
- Do you have the ability to drain within 12 ft. of the dishwasher? (A 60" drain hose is included. If your drain exceeds this distance, you need to purchase a drain hose extension kit)
- Do you have a garbage disposal?
- Do you have the required electrical supply and a min. 15 Amp circuit?

**Step 3** Identify the items you need to purchase for your dishwasher appliance.

### Where to purchase accessories

Accessories can be purchased in-store with unit, or from LG Canada Parts & Accessories:

[Shop online at LGCanadaParts.com](https://www.lgcanadaparts.com)

Call 1-855-341-2732

### Contents

Dishwashers ..... 2



LG dishwasher leveling

Watch video



[www.youtube.com/watch?v=huXc4-f7\\_-M](https://www.youtube.com/watch?v=huXc4-f7_-M)

# LG dishwasher accessory guide



SDWB24S3



LDTH7972\_(S, D)



LDPH5554\_(S/D)



LDPM6762\_(S, D)



LDTSS552\_(S, D)




 
 

 
 



LDPN454\_(HT/2W)



LDFC3532S



LDFC2423\_(V, W)

<p><b>Water supply requirements</b>          LG dishwashers must be connected to a hot water supply with a temperature range between 120°F and 149°F. Required min. / max. water pressure is 20–80 psi.</p>		<p>Required purchase</p>	<p>3/8" braided water supply hose or 3/8" copper tubing with compression fitting (3/8" 90° elbow installed at factory)</p>
<p><b>Drain hose requirements</b>          Cut the included adapter so the end matches the size of the drain connection.</p> 		<p>Optional purchase</p>	<p>Drain hose extension          A 60" drain hose is attached to the dishwasher. If an extension drain hose is required, use a 5/8" or 7/8" inside diameter, 2–3 ft. length hose and a coupler for connecting the two hose ends. Do not exceed 12 ft. distance to the drain*</p> <p>*If connecting the dishwasher's drain hose to the garbage disposal, be sure to follow your garbage disposal's manual for proper installation instructions.</p>
<p><b>Electrical requirements</b></p>		<p>Required purchase</p>	<p>3-wire electric cable connected to a 120 V, 60 Hz, 15 Amp circuit breaker</p>
<p><b>Installation parts</b></p>		<p>Required purchase</p>	<p>Coupler</p>
		<p>Required purchase</p>	<p>Coupler          Air gap</p>
		<p>Required purchase</p>	<p>7/8" strain relief          Hose clamp          Wire nuts for 16-gauge wiring          Electrical tape</p>
		<p>Included</p>	<p>1 Hose clamp          2 Installation brackets          4 Wood screws</p>
<p>If you want the dishwasher toe kick or custom panel and handle to match your cabinetry, you must purchase separately from a local fabricator or cabinet supplier.</p>		<p>Optional purchase</p>	<p>Wood toe kick (if desired)</p>



Accessories can be purchased in-store with unit, or from LG Parts & Accessories:

Shop online at [LGCANADAPARTS.COM](http://LGCANADAPARTS.COM)

Call 1-855-341-2732